Canon

AW-PS 200

ALL WEATHER CASE

Canon Digital Camera All Weather Case

User Guide — ENGLISH

Canon Allwettertasche für Digital Kamera

Bedienungsanleitung — DEUTSCH

Canon Funda protectora impermeable para cámaras digitales

Guía del usuario — ESPAÑOL

Canon Étui de protection tout temps pour appareil de photo numérique

Guide de l'utilisateur — FRANÇAIS

Canon Custodia per tutte le stagioni per fotocamera digitale

Guida per l'utente — ITALIANO

English

Disclaimer

- While every effort has been made to ensure that the information contained in this guide is accurate and complete, no liability can be accepted for any errors or omissions. Canon Inc. reserves the right to change the specifications of the hardware and software described herein at any time without prior notice.
- No part of this guide may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without the prior written permission of Canon Inc.
- Canon Inc. makes no warranties for damages resulting from corrupted or lost data due to a mistaken operation or malfunction of the camera, the software, the CompactFlash™ cards (CF cards), personal computers, peripheral devices, or use of non-Canon CF cards.

Trademark Acknowledgments

- Canon is a trademark of Canon Inc.
- CompactFlash is a trademark of SanDisk Corporation.
- Other names and products not mentioned above may be trademarks or registered trademarks of their respective companies.

Copyright © 2000 Canon Inc. All rights reserved.

Please read this manual carefully to operate the All Weather Case correctly. Keep this manual for further reference.

Introduction

- Thank you for purchasing this All Weather Case. It will allow you to use your Canon Digital Camera in the rain, at the beach or on the ski slopes. You can also use it underwater at depths down to 3 meters (9.8 ft) and in wet or dusty environments.
- Before you use the All Weather Case, please make sure the case is functioning correctly and water does not leak into it. To do so, close the All Weather Case before installing the camera and hold it underwater at a depth of about 15 cm (6.0 in) for a few minutes to check for leaks.
  If water leaks in to your All Weather Case, please contact your Canon Customer Support Help Desk.
- Canon Inc., its subsidiaries and affiliates, and distributors of the All Weather Case are not liable for any consequential damages arising from corrupted or lost data due to mistaken operation or malfunction of the All Weather Case, the digital camera, the battery or the CompactFlash™ card (CF card) that results in the failure of an image to be recorded or to be recorded in a format that is machine readable.
- Please read your digital camera's user manual.

Unpacking

The All Weather Case is shipped with the items listed below. Please check your package now to confirm that it is complete. Contact your Canon dealer if anything is missing.

- **All Weather Case AW-PS200**
- **Neck Strap**
- **Silicone Grease for the Waterproof Seal**
- **Anti-Condensation Solution**
- **User Guide (this guide)**

Safety Precautions

Before you use the All Weather Case, thoroughly read these precautions to ensure correct use.
The precautions described below are for ensuring safe use of the All Weather Case and for preventing danger and damage to yourself and others. Thoroughly understand the details of these precautions before reading the rest of this manual.

- Do not use the All Weather Case as a life preserver. It may sink if water leaks into the case, and may not save you from drowning.
- Do not disassemble or modify the All Weather Case. This may cause it to leak.
- Do not damage the waterproof seal, scratch its contact surfaces, or allow dirt to accumulate between the waterproof seal and the case. This may cause the All Weather Case to leak.
- Do not use the All Weather Case in water at temperatures above 40 °C (104 °F). Heat may warp the All Weather Case or cause it to leak.
- Do not leave the All Weather Case in direct sunlight, inside a car in hot weather or near a heater. Heat may warp the casing and cause the All Weather Case to leak. Cover the All Weather Case with a towel, for example, if you have to leave it in the sun.

Handling Precautions

- Do not throw the All Weather Case into water, nor drop it in snow.
- Use only the supplied silicone grease. Use of other waterproofing products may impair the strength of the All Weather Case. If any other waterproofing product is mistakenly applied, wipe it off immediately.
- Avoid opening or closing the All Weather Case near water. When you are installing the camera or changing the CF card or the battery, choose a place with low humidity well away from salty sea air.
- Avoid using the All Weather Case for long periods of time in hot temperatures.
- The life of the battery is reduced in cold temperatures. When you use the All Weather Case in very cold places, keep it warm by putting it in a bag whenever you are not shooting. It is not advisable to use the All Weather Case in temperatures below freezing point.
- Moving the All Weather Case rapidly between hot and cold temperatures may cause condensation (water droplets) to form on its external and internal surfaces. Condensation may cause malfunctions. You can avoid this by placing the All Weather Case in an airtight plastic bag and letting it adjust to temperature changes slowly before removing it from the bag. Stop using the camera immediately if you detect condensation, wipe off the condensation from the All Weather Case and the camera with a soft, dry cloth, and wait until the moisture evaporates completely before resuming use.

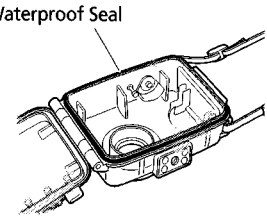

Never remove the waterproof seal. Contact your Canon Customer Support Help Desk.

About Water Leakage

If there is any leakage of water in the All Weather Case, immediately stop shooting. Thoroughly wipe the All Weather Case interior and the camera dry. Please contact your Canon Customer Support Help Desk.

Treat the Waterproof Seal with Care

- Before you release the Catch after using the All Weather Case in salty, sandy or gritty environments, wash the All Weather Case thoroughly with clean, running tap water to remove any sand or grit. Then wipe it with a soft, dry cloth. If you wipe the All Weather Case with sand or grit on it, it may become scratched. Also, if the All Weather Case is left in contact with salty seawater, the metal parts may rust.
- To prevent wear on the waterproof seal, apply a thin coating of grease. Do not use a cloth or paper to apply the grease, as fibers may stick to the seal. Apply a small amount (droplet) of grease to your fingertip, and coat the entire surface of the waterproof seal taking care not to scratch the surface.
- A damaged or cracked waterproof seal may cause the All Weather Case to leak. Please contact your Canon Customer Support Help Desk.

To ensure that the All Weather Case remains waterproof, it is recommended to replace the seal once a year. Please contact your Canon Customer Support Help Desk.

Components

Front

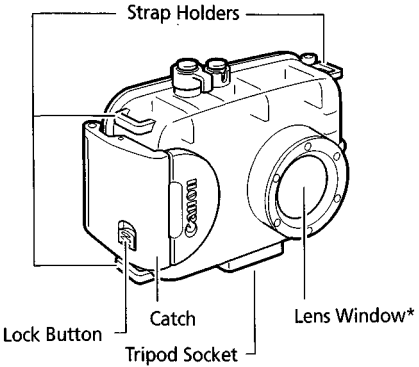

Back

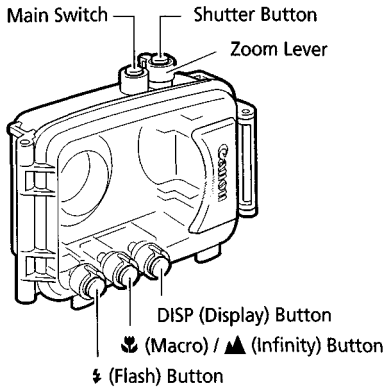

* Since dirt or smudges on the lens window may show in photographs, keep it clean by wiping it gently with a soft, dry cloth.

Preparations

Preparing the Camera

Please also read the camera's user's manual for detailed instructions.

1 **Insert Battery Pack NB-1L and the CF card.**
- Use a battery that is adequately charged.
- Ensure you have enough storage space on your CF card to record your images.

2 **Check the camera power to ensure that it is off.**

3 **Remove the wrist strap.**

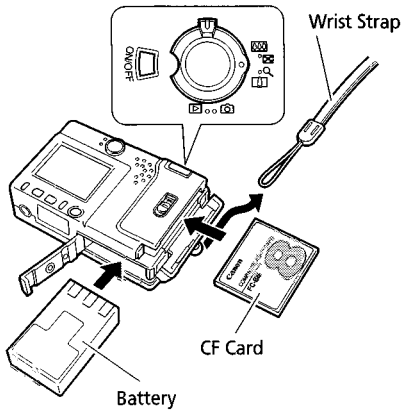

Preparing the All Weather Case

4 Fasten the neck strap to the strap holders and adjust it to a comfortable length.

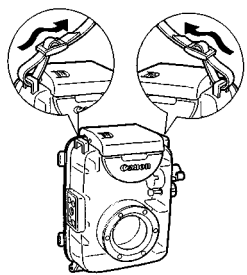

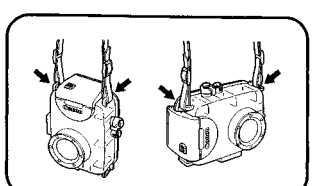

5 Slide the Lock Button to the release position, and open the cover while you release the catch.

- To prevent condensation on the lens window, apply the supplied anti-condensation solution to the inside surface of the window, using a soft cloth. (When the supplied solution is used up, you can use a commercially available product for preventing condensation on the glass.) Use a soft, dry cloth to apply the anti-condensation solution.

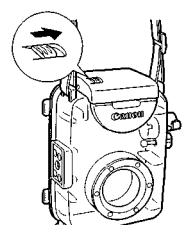

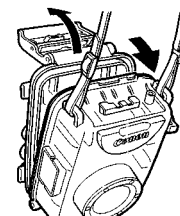

Installing the Camera

6 Slide the Mode Switch to the 📷 (Shooting) position.

7 Insert the camera into the All Weather Case as illustrated.

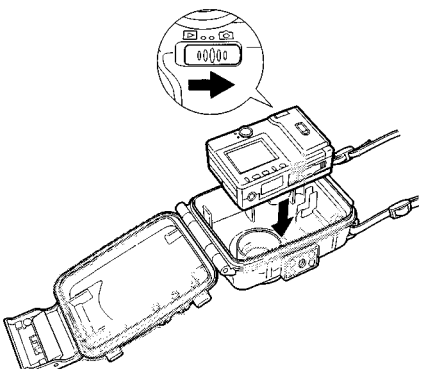

The mode (Shooting/Replay), self-timer/ continuous settings, and menu functions cannot be accessed after the camera is shut inside the All Weather Case. Please remember to adjust settings, such as the image quality and shooting modes, beforehand.
You cannot shoot in Stitch Assist mode with the camera in the case.

8 Close the All Weather Case.

- Make sure that the waterproof seal and its contact surfaces are free of foreign objects (e.g. sand, dirt or hair).
- Make sure that the catch is fastened properly.

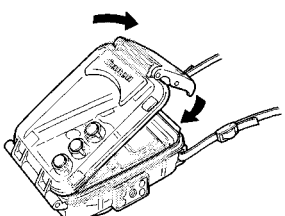

Shooting

1 Press the main switch to turn on the power.

2 If the LCD monitor is off, press the DISP button to turn it on.

- Settings other than the shooting distance settings using the ✿ /▲ button and the flash On/Off settings using the ϟ button cannot be adjusted.
- You can adjust the zoom with the zoom lever.

3 Look at the LCD Monitor and frame the subject.
Press the shutter button halfway and wait until the upper Indicator shines green. After it shines, press the shutter button all the way.

- Make sure that the lens window is always clean.
- Ensure that your fingers do not obstruct the lens window or flash when shooting.

If the auto power save function activates and shuts off the power, press the main switch again.

4 When you have finished shooting, turn the camera power off.

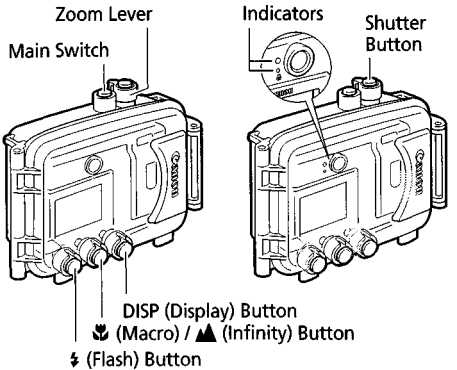

Removing the Camera

1 After use, be sure to dry all the water from the All Weather Case as well as from your body and hair, etc.

- Remove any dirt, sand or other particles from the All Weather Case, and wash it with clean, running tap water. Keep the All Weather Case locked.
- Do not wash the inside of the All Weather Case with water. Wipe with a dry cloth.

2 Slide the lock button upwards as shown, and release the catch to open the cover. Remove the camera from the case.

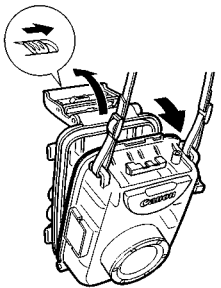

Replay

1 Remove the camera from the All Weather Case, press the main switch and turn on the camera power.

2 Slide the Mode Switch to the ▶ (Replay) position.

3 When you have finished replaying images, turn the camera power off.

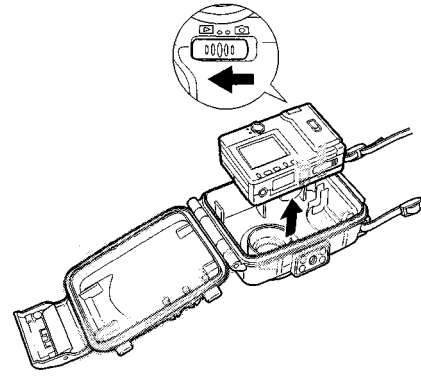

Storage

- To keep the waterproof seal in good condition during storage, do not fasten the catch after closing the All Weather Case.
- Protect the waterproof seal from dust or scratches during storage.
- Do not store the All Weather Case in hot, cold or humid places, or near substances such as naphthalene or insecticides.

Specifications

Materials :	Plastic (Polycarbonate, ABS) and glass
Waterproofing :	Seal and catches
Maximum Depth :	3 m (9.8 ft.)
Available Digital Camera Functions :	Main switch, shutter button, zoom lever, flash button, macro/infinity button, display button
Digital Camera's Operating Temperature :	0 to 40 °C (32 to 104 °F)
Exterior Dimensions (Excluding extrusions) :	85.2 x 118.5 x 45.4 mm (3.4 x 4.7 x 1.8 in)
Weight :	Approx. 180 g (6.4 oz)

Subject to change without notice.

Canon Customer Support

Canon Inc.

30-2 Shimomaruko 3-chome, Ohta-ku, Tokyo
146-8501, Japan

NORTH AMERICA

Canon U.S.A., Inc.

Canon Customer Care Center
Phone (US): 1-800-828-4040
(Available Mon. - Fri., 9 AM to 8 PM Eastern Time)

Canon Canada Inc.

Phone (Canada): 1-800-OK-CANON (1-800-652-2666)
(24 hours/day, 7 days/week)

EUROPE

Europe, Africa & Middle East

Canon Europa N.V.

PO Box 2262, 1180 EG Amstelveen, The Netherlands

Canon (UK) Ltd.

Helpdesk
Tel No.: 08705 143 723 (Calls may be recorded.)
Fax No.: 08705 143 340 BBS No.: 08705 143 350

Canon France S.A.

Hotline : 01.41.99.70.70
Tél : 01.41.99.77.77 Télécopie : 01.41.99.79.51

Canon Photo Vidéo France S.A.

Hotline : 01.49.04.01.00 Télécopie : 01.49.04.01.01

Canon Deutschland GmbH

Canon-Hotline-Service
Customer-Support: (02151) 349-555
Telefax: (02151) 349-588
Info-Desk Tel: (02151) 349-566
Info-Desk Fax : (02151) 349-599
Mailbox : (02151) 349-577

Canon Euro-Photo GmbH
Customer-Support: (02154) 495-610
Info-Desk: (02154) 495-444
Fax: (02154) 495-333

Canon Italia S.p.A.
Pronto Canon : 02 8249 2000 BBS : 02 8249 2099

Canon Belgium N.V. / S.A.
Helpdesk: 0900-10627
Tel.: (02) 722.04.11 Fax: (02) 721.32.74

Canon Luxembourg S.A.
Tel.: (352) 48 47 961 Fax: (352) 48 47 96232

Canon Nederland N.V.
Helpdesk: 023 - 5 681 681
Tel.: 023 - 5 670 123 Fax: 023 - 5 670 124

Canon Danmark A/S
Hotline: 44 88 26 66

Canon España S.A.
Help Desk: 906 301 255
Tel: (91) 538 45 00 Fax: (91) 411 41 76
E-mail: helpdesk@btlink.net

Canon Norge as
Tlf. 22 62 93 21 Faks: 22 62 06 15
E-mail: helpdesk@canon.no

Finland

Canon OY
Puhelin: 010 54420 Fax: 010 544 4571
Help Desk: 0600 0 22606 (14,80 mk/min+pvm)
Help Desk: 0600 0 22666 (enint. 40mk/puhelu+pvm)
Sähköposti: helpdesk@canon.fi

Canon (Schweiz) AG
Tel. 01-835-6161, Fax 01-835-6860
Hotline 0900 57 55 20

Canon Svenska AB
Stensätravägen 13, S-127 88, Skärholmen, Sweden

Austria

Canon GmbH
Zetschegasse 11, 1232 Wien, Austria
Tel: 01 680 88-0
Fax: 01 680 88-222

OCEANIA

Canon Australia Pty. Ltd.
Info-Line: (02) 9805 2864

Canon New Zealand Ltd.
Info-Line: 0900-522666

ASIA

Canon Singapore Pte. Ltd.
79 Anson Road, #09-01 / 06, Singapore 079906
Phone: (65) 532 4400 Fax: (65) 221 7577

Canon Hongkong Co., Ltd.
9/F, The Hong Kong Club Building, 3A Chater Road, Central, Hong Kong
Phone: 852-2739-0802 Fax: 852-2369-7701

Canon Marketing Services
No.1 Jalan Kilang Timor, #09-00, Pacific Tech Centre, Singapore 159303
Phone: (65) 799 8888 Fax: (65) 273 3317

Canon Marketing (Malaysia) Sdn. Bhd.
Wisma General Lumber, Block D, Peremba Square, Saujana Resort, Section U2, 40150, Shah Alam, Selangor Darul Ehsan, Malaysia
Phone: (60) 3 744 6000, (60) 3 745 0055
Fax: (60) 3 745 0505

Canon Marketing (Thailand) Co., Ltd.
10th Floor, Bangkok City Tower, 179/34-45 South Sathorn Road, Bangkok 10120, Thailand
Phone: (662) 344 9999 Fax: (662) 344 9910

Canon Marketing (Hongkong) Co., Ltd.
10/F, Mirror Tower, 61 Mody Road, Tsimshatsui East Kowloon HongKong
Phone: 852-2170-2828 Fax: 852-2723-9684

Canon

H-IM-045-V1 0600CH3.03
© 2000 CANON INC.
PRINTED IN JAPAN
IMPRIMÉ AU JAPON